

KAWASAKI ELECTRO-HYDRAULIC STEERING GEAR SERVICE NEWS		ISSUE : JUL, 14, 2026 DOC.NO. E8-26-012
--	--	--

SUBJECT :	V Series Steering Gear Spare Solenoid Valve Type for Solenoid Hydraulic Valve
-----------	--

When replacing the solenoid valve in the solenoid hydraulic valve with a spare part, we sometimes receive inquiries if the type and hydraulic symbol listed on the nameplate differ between the installed part and the spare part. As shown in Fig-1, this is because the installed part displays the type for the entire solenoid hydraulic valve, whereas the spare part displays the type only for the solenoid valve itself.

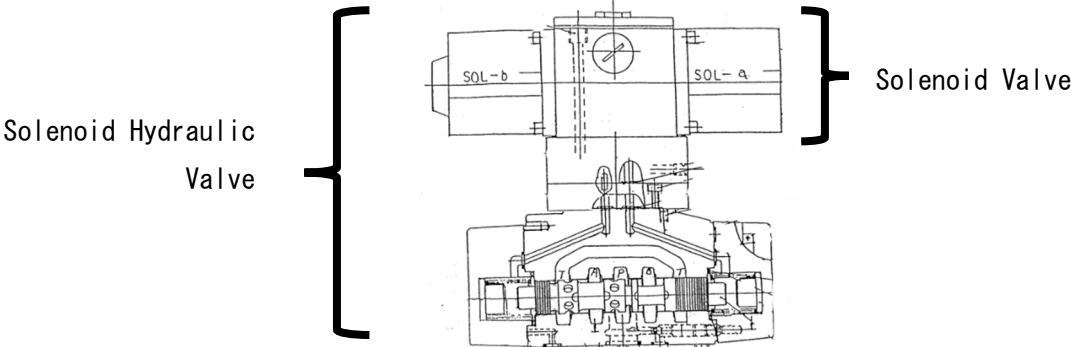
 
 
 
 
 


Fig-1. Solenoid hydraulic valve and solenoid valve

Solenoid valves with corresponding type listed in Table-1 can be used as replacement spare parts.

Table-1. Type/Symbol Comparison table

Solenoid hydraulic valve Type/Symbol	Solenoid valve Type/Symbol
DEH10P-91-207-2DD24ALQMABG24-L67 	DE10P-10-210-DD24AL-L70 
DEH16P-90-207-2DD24AL-L118 	DE10P-10-210-DD24AL-L70 
DEH16P-90-207-2DD24AL-L70 	DE10P-10-210-DD24AL-L70 

When replacing the solenoid valve, please ensure it is assembled carefully to avoid pinching the O-ring, and tighten the bolts to the tightening torque specified in the instruction manual.

川崎重工業株式会社
精密機械・ロボットカンパニー 精密機械ディビジョン
サービス部
KAWASAKI HEAVY INDUSTRIES, LTD.
PRECISION MACHINERY BUSINESS DEVISION
CUSTOMER SERVICE DEPARTMENT