

Technical information

SUBJECT : Clogged air holes in the air breather

An air breather is installed on the gear cover of the enclosed gear type, and one or two air holes are provided on the underside of the air breather. If the air holes become clogged, oil may leak from the sealing parts or moisture may be absorbed inside the gear case.

Make sure that the air holes of the air breather are not clogged with paint or foreign matter, and also make sure that paint does not adhere to the air holes when painting.

If the air holes are blocked, immediately remove any objects blocking the holes.

